


BRAUN





Series 3



370s-3
360s-3

Type 5774
Type 5779

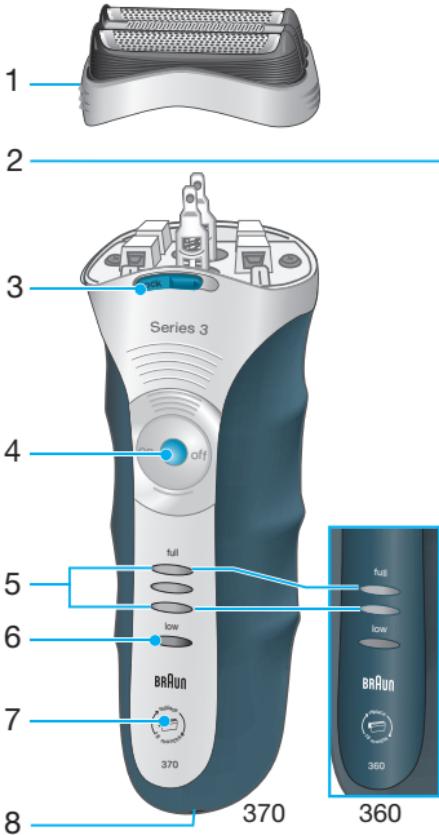

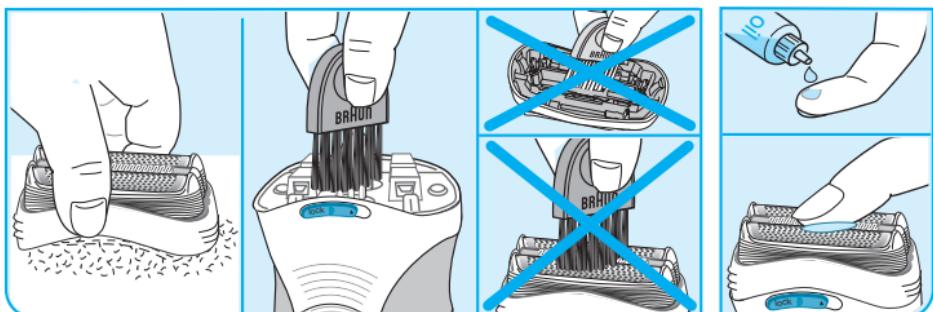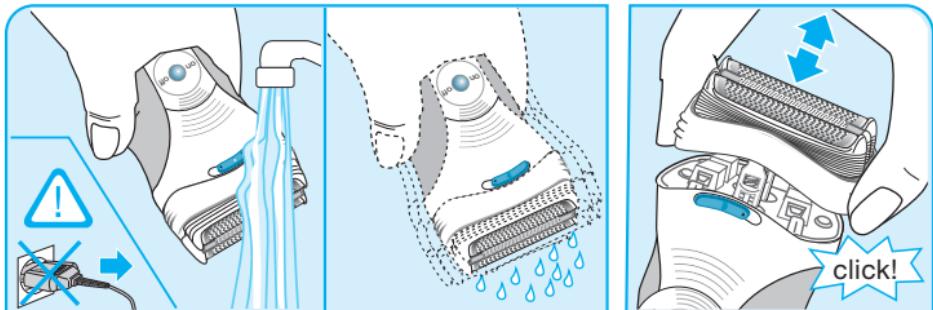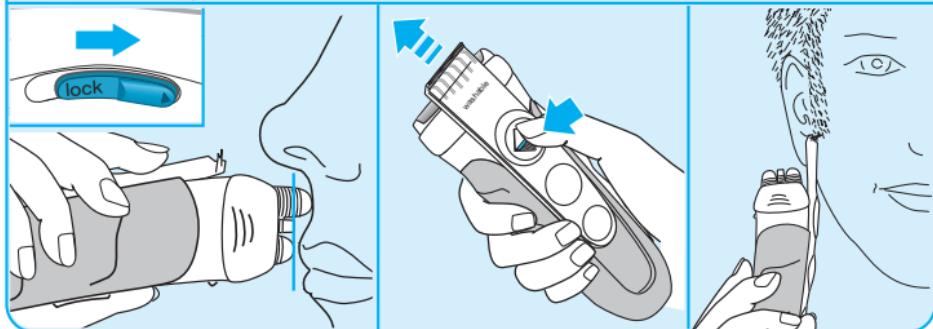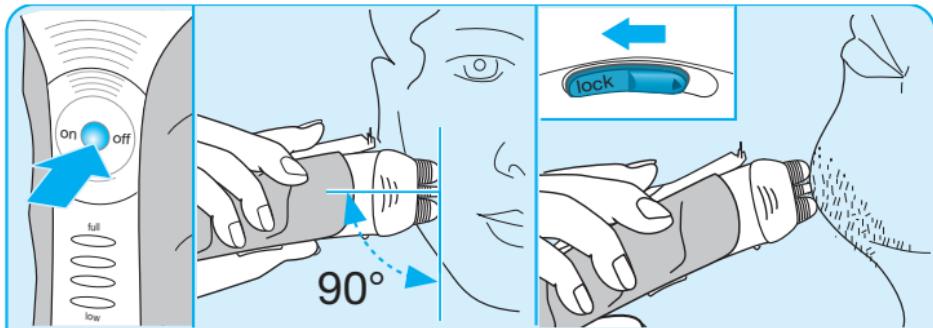

한국어

본 제품은 당사의 엄격한 기준에 맞추어 만들어진 우수한 품질과 기능 그리고 디자인을 갖춘 제품입니다.
저희 브라운 제품을 구입해 주셔서 감사합니다.

주의사항

본 제품은 안전 저전압 전원 장치가 갖추어진 전용 코드세트가 들어 있습니다. 어떤 부품도 함부로 바꾸거나 조작하지 마십시오. 감전의 위험이 있습니다.

이 제품은 안전을 위하여 보호자의 관리 감독이 없는 경우 어린아이나 심신장애자가 사용할 수 없습니다.
어린아이의 손이 닿지 않는 곳에 보관하십시오.

오일 용기

어린아이의 손이 닿지 않게 하십시오. 삼키지 마십시오. 다 쓴 후에는 폐기해주십시오.

각 부의 명칭

- 면도망 & 면도날 카세트
- 긴수염 정리용 트리머
- 정밀면도 세팅 스위치(*lock*)
- On/Off 스위치
- 충전 표시등(녹색)
- 저 충전표시등(적색)
- 부품 교체 표시등
- 면도기 전원 소켓
- 전용 코드 세트
- 면도망 보호 캡(모델 360에만 있음)
- 보관 가방(모델 370에만 있음)

충전

충전을 위한 주변의 최적 온도는 15°C에서 35°C입니다.

면도기를 50°C 이상의 온도에 장시간 방치하지 마십시오.

- 면도기 스위치를 끈 상태에서 전용 코드(9)를 이용해서 면도기를 전원에 연결시키십시오.
- 처음 충전 시에는 최소한 4시간 이상 연속 충전하십시오.
- 충전된 면도기는 사용하면서 방전됩니다. 방전된 후에는 다시 완전히 충전하십시오.
충전은 약 1시간정도 걸립니다.
- 완전 충전된 면도기는 코드 없이 수염 정도에 따라 약 45분 정도 사용 가능합니다. 배터리 용량은 몇 번의 충전과 방전을 거듭한 후에 최대화됩니다.
- 충전용 배터리가 방전된 경우 충전하지 않고 전용 코드를 전원에 연결해서 사용하실 수 있습니다.
- 5분간의 짧은 충전으로도 한 번의 면도가 가능합니다.

충전표시등(5)

- 녹색 충전 표시등은 충전상태를 나타내며 면도기가 충전중이거나 전원을 켜면 깜박입니다. 면도기가 완전히 충전된 상태일 경우 면도기가 켜져 있거나 전원이 연결되어 있으면 녹색등이 지속적으로 켜지게 됩니다.

저 충전표시등(6)

- 배터리가 얼마 남지 않은 경우 적색 저 충전등에 불이 깜박거립니다. 그러나 이때 하시던 면도는 충분히 끝내실 수 있습니다.

면도방법

On/Off 스위치(4)를 눌러서 전원을 켭니다.(그림)

회전하는 면도날이 자동으로 얼굴의 각도에 맞게 움직입니다.(그림)

긴수염 정리용 트리머(2)

긴수염 정리용 트리머(2)를 위로 밀면서 코밑 수염이나 구레나룻을 정리합니다.

정밀면도 세팅 스위치(<<lock>>)(3)

면도하기 어려운 부위(예를 들어 코 아래부분)를 꼼꼼하게 면도하기 위해서 스위치(3)를 오른쪽<<lock>>으로 밀어 주면 중앙에 있는 트리머와 면도망의 위치가 낮아집니다.

완벽한 면도를 위한 제안

최상의 결과를 얻기 위해 다음과 같은 3단계 과정에 따라 면도하십시오.

1. 항상 세면 전에 면도하십시오.
2. 면도기는 피부와 90° 각도로 사용하십시오.
3. 피부를 곧게 편 상태에서 수염이 자란 반대방향으로 면도하십시오.

청소방법

면도기 헤드는 흐르는 수도물 아래에서 세척할 수 있습니다.

주의: 물 청소를 하기 전에 반드시 면도기를 전원과 분리하십시오.

정기적인 청소는 면도 성능을 향상시킵니다. 매번 면도한 후 흐르는 따뜻한 물에 면도기 헤드를 행구는 간편하고 빠른 방법으로 면도기를 깨끗하게 관리하실 수 있습니다:

- 면도기의 스위치를 켜고(코드없이) 면도기 헤드를 흐르는 따뜻한 물에 행구십시오. 연마제가 들어 있지 않은 액체 비누를 사용하십시오. 거품을 모두 행군 후에 면도기를 수초동안 작동시키십시오.
- 다음 면도기 스위치를 끄고 면도망&면도날(1)을 분리한 후 말려주십시오.
- 정기적으로 물청소를 한다면 일주일에 한번 긴수염 정리용 트리머(2)와 면도망&면도날(1)에 윤활유를 한 방울 떨어뜨려 주십시오 (그림)

브러쉬를 사용해서 면도기를 청소하실 수 있습니다.

- 면도기 스위치를 끄십시오. 면도망&면도날 분리한 후 평평한 표면에 놓고 톡톡 쳐서 털어줍니다.
- 솔을 사용해서 면도기 헤드의 내부를 청소하십시오. 면도망&면도날은 솔로 청소하지 마십시오. 손상의 위험이 있습니다.

면도기를 최상의 상태로 유지하려면

면도기 부품 교체와 재설정을 위한 표시등

100% 면도 효과를 얻기 위해 부품 교체표시등(7)에 불이 들어오거나(약 1년 6개월 후) 부품성능 저하 시 면도망&면도날(1)을 교체해 주십시오.

면도망과 면도날: 32S

면도망&면도날의 교체시기가 되면 부품 교체표시등이 켜져서 7번 면도를 하는 동안 잊지 않도록 알려줍니다. 그 후에는 자동으로 재설정됩니다. 면도망&면도날(1)을 교체한 후에 On/Off 스위치(4)를 최소 5초간 눌러서 카운터를 재설정합니다. 조작하는 동안 교체표시등이 깜박거리다 재설정이 완료되면 불이 꺼집니다. 수동설정은 자유롭게 하실 수 있습니다.

배터리 관리

충전용 배터리의 최대 용량을 유지하기 위해 약 6개월에 한 번씩 완전히 방전시킨 후 재충전하십시오.

환경보호 주의사항

본 제품에는 충전용 배터리가 들어 있습니다. 환경보호를 위하여 수명이 다한 후에도 일반쓰레기와 함께 버리지 마십시오. 브라운 서비스센터나 지정된 폐전지 수거함을 통해 배출하십시오.



상기 사항은 소비자에게 알리지 않고 변경될 수 있습니다.

전자 부품 명세는 전용 코드 세트에 표시된 사항을 참조하십시오.

품질 보증

- 본 제품은 **구입일로부터 1년간** 품질을 보증합니다.
- 1년간의 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.
- 보증기간 내에라도 소비자의 귀책사유에 의한 파손(전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.
- 브라운 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 브라운 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다. 그리고 본 제품의 구입일자가 판매점에 의해 혹은 구입시의 영수증에 의해 확인되어야만 정상적인 품질 보증품으로 인정됩니다. (**구입시 영수증을 잘 보관하시어**
에프터 서비스 시 불이익이 없도록 하십시오.)

에프터 서비스를 받으셨더라도 원래의 품질보증기간이 연장되는 것은 아닙니다.

본 제품은 소비자분쟁해결기준에 따라 보상 받을 수 있습니다.

A/S 문의: 1588-1588

가까운 대우 일렉 서비스 센터에서 A/S를 받으실 수 있습니다.

브라운제품:

전국 유명 백화점, 할인점, 양판점 및 전자상가에서 구입할 수 있습니다.

<http://www.braun.com>

<http://www.braun.co.kr>

품질보증서

본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다.
아래 기재된 내용으로 품질을 보증합니다.

제품명	모델명	구입일
구입일	보증기간	구입일로부터 1년
고	판	
객	매	
	점	

한국 피엔지 판매 (유)
서울특별시 강남구 역삼동 679-1
전화: 080-020-60000 수신자무인

English

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun Shaver.

Warning

Your shaving system is provided with a special cord set, which has an integrated Safety Extra Low Voltage power supply. Do not exchange or tamper with any part of it, otherwise there is risk of an electric shock.

This appliance is not intended for use by children or persons with reduced physical or mental capabilities, unless they are given supervision by a person responsible for their safety. In general, we recommend that you keep the appliance out of reach of children. Children should be supervised to ensure that they do not play with the appliance.

Oil bottle

Keep out of reach of children. Do not swallow. Dispose of properly when empty.

Description

- 1 Foil & Cutter cassette
- 2 Long hair trimmer
- 3 Precision setting switch («lock»)
- 4 On/off switch
- 5 Charging lights (green)
- 6 Low-charge light (red)
- 7 Replacement light for shaving parts
- 8 Shaver power socket
- 9 Special cord set
- 10 Foil protection cap (model 360 only)
- 11 Etui (model 370 only)

Charging

The best environmental temperature for charging is between 15 °C to 35 °C. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time.

- Using the special cord set (9), connect the shaver to an electrical outlet with the motor switched off. When charging for the first time, leave the shaver to charge continuously for 4 hours.

- Once the shaver is completely charged, discharge the shaver through normal use. Then recharge to full capacity. Subsequent charges will take about 1 hour.
- A full charge provides up to 45 minutes of cordless shaving time depending on your beard growth. However, the maximum battery capacity will only be reached after several charging/discharging cycles.
- If the rechargeable batteries are discharged, you may also shave by connecting the shaver to an electrical outlet via the special cord set.
- 5-minute quick charge is sufficient for a shave.

Charging lights (5)

The green charging lights show the charge status of the batteries. The green charging light blinks when the shaver is being charged or switched on. When the battery is fully charged, all green charging lights shine permanently, provided the shaver is switched on or connected to an electrical outlet.

Low-charge light (6)

The red low-charge light flashes when the battery is running low. You should be able to finish your shave.

Shaving

Press the on/off switch (4) to operate the shaver (picture).

The flexible shaving foils automatically adjust to every contour of your face (picture).

Long hair trimmer (2)

To trim sideburns, moustache or beard, slide the long hair trimmer upwards.

Precision setting switch («lock») (3)

For precise handling in hard to shave areas (e.g. under the nose) slide the switch (3) to the right to position «lock». The centre trimmer and one foil will be lowered.

Tips for the perfect shave

For best results, Braun recommends you follow 3 simple steps:

1. Always shave before washing your face.
2. At all times, hold the shaver at right angles (90°) to your skin.
3. Stretch your skin and shave against the direction of your beard growth.

Cleaning



The shaver head is suitable for cleaning under running tap water.
Warning: Detach the shaver from the power supply before cleaning the shaver head in water.

Regular cleaning ensures better shaving performance. Rinsing the shaver head under running water after each shave is an easy and fast way to keep it clean:

- Switch the shaver on (cordless) and rinse the shaver head under hot running water. You may use liquid soap without abrasive substances. Rinse off all foam and let the shaver run for a few more seconds.
- Next, switch off the shaver, remove the shaver Foil & Cutter cassette (1) and let it dry.
- If you regularly clean the shaver under water, then once a week apply a drop of light machine oil onto the long hair trimmer (2) and shaver Foil & Cutter cassette (1) (picture).

Alternatively, you may clean the shaver using a brush:

- Switch off the shaver. Remove the shaver Foil & Cutter cassette and tap it out on a flat surface (picture).
- Using a brush, clean the inner area of the shaver head. However, do not clean the shaver Foil & Cutter cassette with a brush as this may damage it (picture).

Keeping your shaver in top shape

Replacement light for shaving parts/Reset

To maintain 100% shaving performance, replace the shaver Foil & Cutter cassette (1), when the replacement light for shaving parts (7) comes on (after about 18 months) or when worn.

Foil & Cutter cassette: 32S

The replacement light will remind you during the next 7 shaves to replace the Foil & Cutter cassette. Then the shaver will automatically reset the display. After you have replaced the Foil & Cutter cassette (1), press the on/off switch (4) for at least 5 seconds to reset the counter.

While doing so, the replacement light blinks and goes off when the reset is complete. The manual reset can be done at any time.

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the shaver has to be fully discharged (by shaving) every six months approximately. Then recharge the shaver to full capacity.

Environmental notice

This product contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection sites provided in your country.



Subject to change without notice.

For electric specifications, see printing on the special cord set.

99625069/VII-10
Korea/GB